

IVROU IRYS-01

FILTERING HALF MASK

Standard Size / Earloop

User Instructions

IMPORTANT: Keep these User Instructions for reference

EN 149:2001+A1:2009 FFP2

INSTRUCTIONS

Standard:

This product meets the EN 149:2001+A1:2009 standard for respiratory protective devices -

Filtering half masks to protect against particles. This filtering face masks is classified as category

01 Personal Protective Equipment (PPE) impressed EC marking in conformity with European Commission Regulation (EU) 2016/425 relating to PPE.

Intended use:

The dust mask is classified as category FFP 2. It provides protection against particulates, mist, smoke and oil -based aerosols. The packaging provides the mask with hygienic protection prior to its use. The mask can only be used for personal protection, not for medical purposes.

Warnings:

The user must be trained and given the correct instructions about how to wear the mask. FFP masks do not provide protection against gases and vapours.

The ambient oxygen concentration may not be less than 19.5 Vol.%.

The masks should not be deployed if the concentration, type or nature of the contamination is unknown or is of a hazardous level.

Masks must be replaced after they have been damaged, if the breathing resistance is increased

as a result of clogging, and after use.

No changes may be made to the mask.

Instructions:

The mask is intended to be used only once. Do not use more than once.

Keep the packaging closed until you will use the mask.

Replace the mask if it is damaged or if the breathing resistance increases due to clogging.

Not to be used during firefighting activities.

Not to be used in an explosive atmosphere.

Non-observance of the instructions and warnings for using this mask could lead to a poorer performance of the mask and could result in health problems.


Keep facial hair from underneath the mask. The mask cannot offer maximum protection when it fails to properly connect to your face due to facial hair.

Transport and storage:

Do not expose to direct sunlight. Store in a dry and frost-free location.



Shelf life of unopened product is 2 years from date of manufacture.

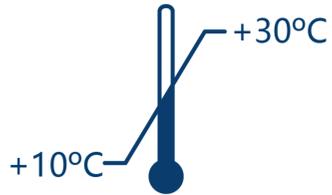


Temperature Range: +10°C to +30°C



Maximum Relative Humidity: <70%

Usage:

1. Take the mask in one hand and hold the nose piece between your fingertips. Ensure that the ear straps are hanging freely without making contact with your hand.
2. Press the mask against your chin, with the nose piece pointing towards the front. Keep facial hair from between the mask.
3. Face the mask without the nose clip so that the nose clip is above the mask.
4. Pull the ear strap behind the ear and hang it
5. Press the nose clip to both sides with both hands to make the nose clip fit to the tightness of the mask.
6. Try the mask before you enter the work area.

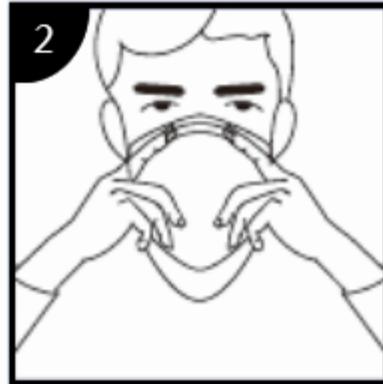

For detailed steps, please refer to the outer packaging.

It is very important to press the nosepiece firmly to the nose bridge to form a good seal.

UNIMAMA B.V.

Lutkemeerweg 298,1067 TH Amsterdam Netherlands

Email: info@ivrou.com

Website: WWW.IVROU.COM

MANUFACTURER:

Ghangzhou Carrot Mall Network Technologies Co.,Ltd.

ADDRESS: Room 1406, NO.4 Zhudian Road (Nansha Street), Nansha Dustrict, Ghuangzhou, Ghuangdong
Province, China

Tel: +86 13631349700

E-mail: eagle.chen@hlbcun.com

Made in China